

Phone: 705-673-7383 www.petesrentall.ca

INFLATOR INSTRUCTIONS

ELECTRIC BALLOON



OPERATING INSTRUCTIONS

Push valve operations is suitable for inflating single or few balloons:

Pinch the edge of the balloon with the fingers first and cover the valve with the balloon. Press down on the valve to inflate the balloon to desired size.

"ON" Operation is suitable for inflating many balloons continuously:

For inflating the balloons continuously, press switch to on position and cover the valve with the neck of the balloon to inflate.

IMPORTANT SAFETY INSTRUCTIONS

- This is NOT a toy, Keep out of children's reach
- For indoor use only
- If the supply cord is damaged, it must be replaced by the manufacturer
- To reduce the risk of electric shock, do not expose to water
- Do not obstruct the air passage opening or insert any objects into the opening at any time
- IMPORTANT! Do not operate the air pump for more than one (1) hour at a time
- Take 15 minute breaks between uses, as overheating may occur and pump will automatically shut off
- Unit will be ready to use after it has cooled down, this automatic shut off is for your safety
- Unplug unit when not in use